

## LAMP AND BALLAST PAIRING GUIDE

BALLAST PART #	LAMP PART #											
	F14T5	F14T5XL	F21T5	F24T5HO	F28T5	F28T5XL	F39T5HO	F54T5HO	F54T5HOXL	F32T8HE25W	F32T8HE28W	
1				X								
2				X								
3	X	X	X		X	X						
4	X	X	X		X	X						
5										X	X	
6										X	X	
7										X	X	
8										X	X	
9										X	X	
10				X			X					
11				X			X					
12								X	X			
13								X	X			
14										X	X	
15										X	X	
16										X	X	
17										X	X	
18										X	X	
19										X	X	
20										X	X	
21										X	X	
22								X	X			